

# DIRIS B

Multifunction power monitoring devices



your energy  
our expertise



**socomec**  
Innovative Power Solutions

# Monitor your remote measurement points

DIRIS B meters communicate wirelessly or via RS485 Modbus and offer several communication protocols. Measurement and metering data can be displayed on a DIRIS D-30 remote screen or centralised and made available on an Ethernet network using a DIRIS-G communication gateway.

## Advantages



### Flexible

#### Multi-circuit

Ability to monitor several circuits thanks to four independent current inputs.

For example, it allows to measure or monitor:

- 1 three-phase load + 1 single-phase load,
- 4 single-phase loads.

#### Compact

Modular, 3 modules device.



### Accurate

#### Accuracy of measurements

**guaranteed** according to IEC standard 61557-12:

- Class 0.5 from 2 % to 120 % of rated current for the global measurement chain (associated with TE/TF current sensors).
- Class 0.2 for the meter alone.



### Plug & Play

#### Rapid & reliable connection (RJ12) of current sensors

- Automatic detection of ratings and correction of current flow direction.
- Prevents wiring errors, allows disconnection of the current sensor secondary under load.

#### Auto-configuration

Automatic detection of parameters:

- Network type.
- Load type.
- Device addressing.
- Current sensor ratings.



### Connected

- Wireless or cabled (RS485).
- Multi-protocol: Modbus, BACnet, PROFIBUS.
- Remote DIRIS D-30 screen for displaying measurement and metering data.
- Linked to a DIRIS G-40 or G-60 gateway for centralisation and communication of data via RF or RS485 to Ethernet.



DIRIS B 010 A

**DIRIS B**  
Radio-frequency



DIRIS D 001 A

**DIRIS D-30**  
Remote screen




Optional module



DIRIS B

## System

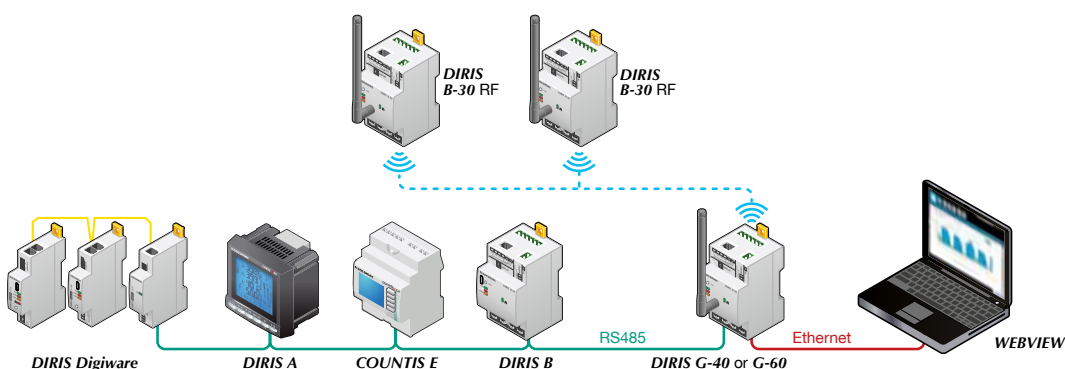

# Associated current sensors *TE*, *TR* and *TF*

A rapid RJ12 connection makes wiring easy and reliable. The accuracy of the global measurement chain is guaranteed according to standard IEC 61557-12:

- class 0.5 with TE or TF current sensors,
- class 1 with TR current sensors.



RJ12 cables with fail-safe mechanisms are available; refer to the relevant pages of the catalogue.

## TE Solid current sensors



Suitable for new installations - Match the pitch of protective devices.

	TE-18		TE-25	TE-35	TE-45	TE-55	TE-90
Rated current (A)	5 to 20	25 to 63	40 to 160	63 to 250	160 to 630	400 to 1000	600 to 2000
Real range covered (A)	0.1 to 24	0.5 to 75	0.8 to 192	1.26 to 300	3.2 to 756	8 to 1200	12 to 2400
Aperture (mm)	Ø 8.4	Ø 8.4	13.5 x 13.5	21 x 21	31 x 31	41 x 41	64 x 64
Dimensions (mm)	28x20x45	28x20x45	25x32.5x65	35x32.5x71	45x32.5x86	55x32.5x100	90x24.5x126
Connection	RJ12	RJ12	RJ12	RJ12	RJ12	RJ12	RJ12
References	4829 0500	4829 0501	4829 0502	4829 0503	4829 0504	4829 0505	4829 0506

For loads greater than 1000 A, use the 5 A/RJ12 adapter associated with 5A secondary CTs.

Staggered assembly



DIRIS T 005 A

Linear assembly



DIRIS T 006 A

## TR Split-core current sensors



Suitable for existing installations.

	TR-10	TR-16	TR-24	TR-36
Rated current (A)	25 to 75	32 to 100	63 to 200	200 to 600
Real range covered (A)	0.5 to 90	0.64 to 120	1.26 to 200	4 to 720
Diameter (mm)	Ø 10	Ø 16	Ø 24	Ø 36
Dimensions (mm)	25x39x71	30x42x74	45x44x95	57x42x111
Connection	RJ12	RJ12	RJ12	RJ12
References	4829 0551	4829 0552	4829 0553	4829 0554

For loads greater than 600 A, use the the 5 A/RJ12 adapter associated with 5A secondary CTs.

TR Split-core current sensors



DIRIS T 012 A

## TF Flexible (Rogowski) current sensors



Suitable for existing installations with space restrictions or with high-intensity currents.

	TF-55	TF-120	TF-300
Rated current (A)	150 to 600	500 to 2000	1600 to 6000
Real range covered (A)	3 to 720	10 to 2400	32 to 7200
Diameter (mm)	Ø 55	Ø 120	Ø 300
Connection	RJ12	RJ12	RJ12
References	4829 0570	4829 0571	4829 0572

TF Flexible current sensors



DIRIS T 015 A

## Selection guide

	DIRIS B-10 RS485	DIRIS B-30 RS485	DIRIS B-30 RF
<b>Multi-measurement</b>			
Currents, voltages (ph/ph and ph/n), active/reactive/apparent powers, power factor, frequency	•	•	•
Voltage/current unbalance	•	•	•
Power factor, cos Phi, tan Phi	•	•	•
<b>Metering</b>			
kWh (+/-), kvarh (+/-), kVAh	•	•	•
Multi-tariff	•	•	•
Load curves		•	•
<b>Quality analysis</b>			
THDV, THDU, THDI	•	•	•
Individual harmonics V, U & I (up to rank 63)		•	•
Voltage dips, cut-offs and surges (EN50160)		•	•
Overcurrents		•	•
<b>Alarms</b>			
		•	•
<b>Communication</b>			
RS485 Modbus	•	•	
868 MHz radio-frequency			•
2 inputs (status/pulse)	•	•	•
References	4829 0010	4829 0000	4829 0002

OPTIONAL MODULES <sup>(1)</sup>	
2 inputs/2 outputs, digital	4829 0030
2 inputs/2 outputs, analogue, 4-20 mA	4829 0031
3 temperature inputs, PT100/PT1000	4829 0032
RS485 Modbus slave interface	4829 0033
PROFIBUS communication	4829 0034
BACnet IP communication	4829 0035
BACnet MSTP communication	4829 0036

DISPLAY	
DIRIS D-30 single-point display	4829 0200

(1) Up to 4 optional modules per meter.

# Socomec worldwide

## IN EUROPE

### BELGIUM

Critical Power / Power Control & Safety /  
Energy Efficiency

Tel. +32 2 340 02 30  
Fax +32 2 346 28 99  
info.be@socomec.com

### FRANCE

Critical Power / Power Control & Safety /  
Energy Efficiency

Tel. +33 1 45 14 63 00  
Fax +33 1 48 67 31 12  
dcm.ups.fr@socomec.com

### GERMANY

Critical Power

Tel. +49 621 71 68 40  
Fax +49 621 71 68 444  
info.ups.de@socomec.com

Power Control & Safety / Energy Efficiency

Tel. +49 7243 65292 0  
Fax +49 7243 65292 13  
info.scip.de@socomec.com

### ITALY

Critical Power

Tel. +39 02 98 242 942  
Fax +39 02 98 240 723  
info.ups.it@socomec.com

Power Control & Safety / Energy Efficiency

Tel. +39 02 98 49 821  
Fax +39 02 98 24 33 10  
info.scip.it@socomec.com

### NETHERLANDS

Critical Power / Power Control & Safety /  
Energy Efficiency

Tel. +31 30 760 0900  
Fax +31 30 637 2166  
info.nl@socomec.com

### POLAND

Critical Power

Tel. +48 22 825 73 60  
Fax. +48 22 825 73 70  
info.ups.pl@socomec.com

Power Control & Safety / Energy Efficiency

Tel. +48 91 442 64 11  
Fax +48 91 442 64 19  
info.scip.pl@socomec.com

### PORTUGAL

Critical Power / Power Control & Safety /  
Energy Efficiency

Tel. +351 261 812 599  
Fax +351 261 812 570  
info.ups.pt@socomec.com

### ROMANIA

Critical Power / Power Control & Safety /  
Energy Efficiency

Tel. +40 21 319 36 88  
Fax +40 21 319 36 89  
info.ro@socomec.com

### SERBIA

Critical Power / Power Control & Safety /  
Energy Efficiency

Tel. +381 11 40 43 246  
Fax +381 11 40 43 245  
info.rs@socomec.com

### SLOVENIA

Critical Power / Power Control & Safety /  
Energy Efficiency

Tel. +386 1 5807 860  
Fax +386 1 561 11 73  
info.si@socomec.com

### SPAIN

Critical Power / Power Control & Safety /  
Energy Efficiency

Tel. +34 93 540 75 75  
Fax +34 93 540 75 76  
info.es@socomec.com

### SWITZERLAND

Critical Power

Tel. +41 44 745 40 80  
Fax +41 44 745 40 85  
info@socomec.ch

### TURKEY

Critical Power / Power Control & Safety /  
Energy Efficiency

Tel. +90 216 540 71 20-21-22  
Fax +90 216 540 71 27  
info.tr@socomec.com

### UNITED KINGDOM

Critical Power

Tel. +44 1285 863 300  
Fax +44 1285 862 304  
info.uk@socomec.com

Power Control & Safety / Energy Efficiency

Tel. +44 1462 440 033  
Fax +44 1462 431 143  
info.uk@socomec.com

## IN ASIA PACIFIC

### AUSTRALIA

Critical Power / Power Control & Safety

Tel. +61 2 9325 3900  
Fax +61 2 9888 9544  
info.ups.au@socomec.com

### CHINA

Critical Power / Power Control & Safety /  
Energy Efficiency

Tel. +86 21 52 98 95 55  
Fax +86 21 62 28 34 68  
info.cn@socomec.com

### INDIA

Critical Power / Power Control & Safety /  
Energy Efficiency

Tel. +91 44 39215400  
Fax +91 44 39215450 & 51  
info.in@socomec.com

### SINGAPORE

Critical Power / Power Control & Safety /  
Energy Efficiency

Tel. +65 6506 7600  
Fax +65 64 58 7377  
info.sg@socomec.com

### THAILAND

Critical Power

Tel. +66 2 941 1644 7  
Fax +66 2 941 1650  
info.ups.th@socomec.com

## IN MIDDLE EAST

### UNITED ARAB EMIRATES

Critical Power / Power Control & Safety /  
Energy Efficiency

Tel. +971 4 29 98 441  
Fax +971 4 29 98 449  
info.ae@socomec.com

## IN AMERICA

### USA, CANADA & MEXICO

Power Control & Safety / Energy Efficiency

Tel. +1 617 245 0447  
Fax +1 617 245 0437  
info.us@socomec.com

## OTHER COUNTRIES

### NORTH AFRICA

Algeria / Morocco / Tunisia  
info.naf@socomec.com

### AFRICA

Other countries

info.africa@socomec.com

### SOUTH EUROPE

Cyprus / Greece / Israel / Malta  
info.se@socomec.com

### SOUTH AMERICA

Tel. +34 93 540 75 75  
info.es@socomec.com

### MORE DETAILS

www.socomec.com/worldwide

## HEAD OFFICE

### SOCOMECS GROUP

SAS SOCOMECS capital 10 686 000 €  
R.C.S. Strasbourg B 548 500 149  
B.P. 60010 - 1, rue de Westhouse  
F-67235 Benfeld Cedex - FRANCE  
Tel. +33 3 88 57 41 41  
Fax +33 3 88 74 08 00  
info.scip.isd@socomec.com

## YOUR DISTRIBUTOR / PARTNER

www.socomec.com

your energy  
our expertise



ENERGY  
SPECIALIST  
SINCE 1922

**socomec**  
Innovative Power Solutions